

CHUNGHOP®

K-100ES

Universal air conditioner remote control

User's Manual

Battery Installation:


1. Remove the battery cover of the remote control, install two new 7# batteries;
2. Install the battery cover. The time will appear in the left corner of LCD display.



Product Introduction

K-100ES type universal air conditioner remote control can remotely control most brands and models of air conditioners with digital automatic code searching function with low power consumption, complete function, far sending distance, easy setting, simple operation, original appearance, comfortable handle and convenient use, it applies big LCD display with clear settings, built-in clock and timing ON/OFF function also make operation more convenient.

Panel Description:

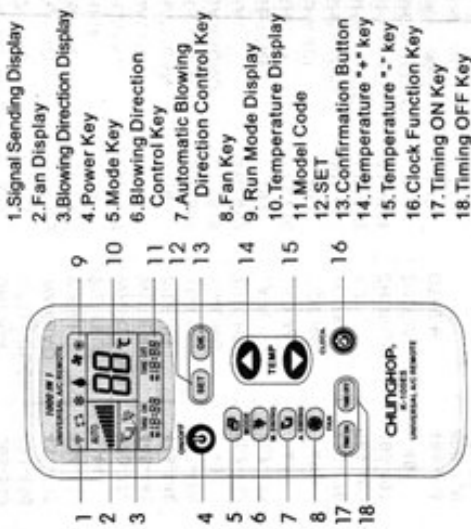

1. Signal Sending Display
2. Fan Display
3. Blowing Direction Display
4. Power Key
5. Mode Key
6. Blowing Direction Control Key
7. Automatic Blowing Direction Control Key
8. Fan Key
9. Run Mode Display
10. Temperature Display
11. Model Code
12. SET
13. Confirmation Button
14. Temperature +/- key
15. Temperature +/- key
16. Clock Function Key
17. Timing ON Key
18. Timing OFF Key

Setting of Remote Control

Three methods (Method A/B/C) are provided to set this remote control, any one of which can be used in operation.

A. Manually input code

1. Manually plug-in the air conditioner, find the type of the air conditioner in the "Code Table", and find the first code, for example: Haier

BRAND	CODE
HAIER	001-019


Code is flashing
2. Hold SET button (for about three seconds) until the conditioner type code flickers in the window, press Temperature ▲ or ▼ buttons to adjust temperature until the desired code flickers in the window. When the code is right, the air conditioner will start.
Code stops flashing
3. Press OK button and the selected conditioner type code will stop flickering.

4. Test whether the remote control button has been effectively set. If yes, setting completes. And if no, repeat steps 2-3.

B. Manually search for code

1. Manually plug-in the air conditioner, aim the remote control at the receiving window of the air conditioner.
2. Hold SET button (for about three seconds) until the conditioner type code flickers in the window, and press Temperature ▲ button and notice the status of your air conditioner until the air conditioner automatically starts, then press OK button to finish setting.

C. Digital automatic search type

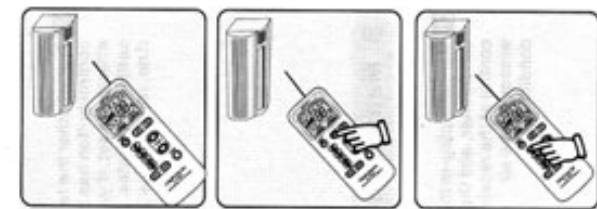

1. Manually plug-in the air conditioner, aim the remote control at the receiving window of the air conditioner.
2. Hold SET button (for about six seconds) until the conditioner type code changes in the window, indicating you have entered the high-speed conditioner type search status. Note the status of your air conditioner and press OK button to stop search until the air conditioner automatically starts.
3. Test whether the functions of remote control buttons (excluding Temperature and buttons, timed ON/OFF buttons, and Set button) are correct. If yes, the code is effect and press OK button to end setting. If not, press SET button to continue the search.

Set Time Function

Press CLOCK button (for three seconds) to enter the clock setting status, and the clock will flicker. Use the Temperature ▲ or ▼ buttons to adjust the current time, and press CLOCK button again to exit setting.

Timing ON/OFF Function

To configure the timer function of the original remote control, press TIME ON or TIME OFF buttons, and the air conditioner timer lights will go on, indicating the air conditioner has entered the timed status. ※ The timed ON function of some of the air conditioner types is only valid only in the Power Off status.

- This remote control is effective if the air conditioner timer works normally.
- The timer will not increase the functions of your air conditioner. If blowing direction function is not available for your air conditioner, then the blowing direction key of this remote control will be invalid.
- Do not use old and new batteries or batteries of different models at the same time.
- Please refer to the manual for the battery replacement. It is recommended to be not in use for a long time.
- If any possibly caused internal program disorder if this remote control is not operated correctly, in case of that, please take out the battery, and install the batteries 35 minutes later, then the remote control may recover normal.

Applicable brand and code list

BRAND	CODE	BRAND	CODE	BRAND	CODE	BRAND	CODE	BRAND	CODE
AKIRA	796-797	GALANZ	140-149	KTY004	288	SHUANGLU	416-418		
AUX	180-199	GREE	000,020-039	KTY005	289	SIGMA	447		
AUCMA	210-229	GEER	342-343	LIANGYU	780	SOGO	291		
AIDELONG	293-295	GLEE	280	LG	600-609	SOVA	292		
AITE	296-299	GUQIAO	344	LITTLESWAN	453	SONGXING	419		
AOLI	300	GUANGDA	345-346	LIKEAIR	386-387	SOVA	420		
AOKE	301-302	HAIER	001-019	LOREN-SEBO	801-803	SOYEA	421-422		
BAIXUE	299	HICON	391-392	MCQUAY	790-795	SRTC	423		
BEIJINGDIAN	304	HITACHI	640-659	MD	040-059	SUNBURG	817-820		
BOERKA	305-306	HISENSE	230-239	MEILING	389-390	TCL	120-139		
BORLER	307	HONGYI	347	MINGXING,BOYIN	290	TECO	831-834		
BOSHIGAO	308-309	HUABAO	100-109	MITSUBISHI	551-599	TIANYUAN	425-428		
BOSHI	310	HUALING	150-169	NATIONAL	660-690	TIANYUWONGTIAO	424		
BIG-THUMB	331	HUAGAO	348	NISO	497	TOBO	250-269		
CAIXING	311	HUAWEI	281	NISO	398-399	TONGLI	429-430		
CARRIER	690-699	HUAKE	349-350	NIKKO	810-811	TOSHIBA	630-639		
CHANGLING	312-323	HUAMEI	351-352	PANSONIC	660-689	TOYO	825-828		
CHANGHONG	060-079	HUANGHE	353	PANDA	464-466	TRANE	812-816		
CHANGFENG	190	HUIFENG	354-356	PINSHANG,INHUABAO	290	UNI-AIR	368-369		
CHENGYUAN	324	HUIFENG	357	QIXING	393	UTTLEDUCK	454-456		
CHUANGHUA	325-328	HYUNDAI	780-789	RAYBO	371-383	WANBAO	431-433		
CHUNLAN	170-179	INYCIN	475-483	ROWA	383-385	WEILI	434-443		
CHIGO	080-099	JIALE	358	RICAI	394	WEITELI	444		
CONROWA	337-341	JIANGNAN	359	RIJIANG	395-397	WHIRLPOOL	770-774		
CORONA	760-769	JMSTAR	360	SACON	414	WUFENG	445-446		
CHANGFU	835-838	JINBEIJING	361-362	SANZUAN	190	XILENG	448-449		
DAEWOO	332-333	JINDA	491-492	SANYO NEC	500-550	XINLE	457-460		
DAIKIN	740-759	JINSONG	363-365	SAMSUNG	610-629	XINLING	461		
DAJINXING	329-330	JOHNSO	282	SAST	450-452	XINGHE	462-463		
DAOTIAN	821-824	KANGLI	368-370	SERENE	499	YAIR	467-471		
DONGXINBAO	260-268	KELONG	110-119	SHARP	720-739	YAOMA	470		
DONGXIA	334-335	KLIMATAIR	797-800	SHAMEI	400	YIDONG	499		
DUNAN	336	KONKA	366-367	SHANXING	401-402	YORK	775-779		
ELECTROLUX	471-474	KRIS	804-805	SHANGLING	403-409	YUTU	484-490		
FEILU	240-249	KT02_D001	283	SHENBAO	410-411	ZHONGYI	493-494		
FEIGE	829-830	KTY02_D002	284	SHENGFENG	412	ZUODAN	495		
FRESTECH	270-279	KTY001	285	SHENGFENGFEU	413	OTHER	496,498		
FUJITSU	700-719	KTY002	286	SHINING	415		806-809		
GOLDSTAR	303	KTY003	287	SHINCO	200-209		839-999		

※ This company reserves the right to interpretation of the User's Manual. Design and technical parameters may vary without notice.